

**Battery installation for STK-74 / RPKS74MN / TIMS / LCK-106 ;**  
There are some models have to unload the heat sink: LCK-74MN / LCKS-74M / LCK-104 / LCK-105 / LCKMMS / G-03M / G-04M / PP-19-01



1. After assemble A and BOX, put into Receiver with HOP-UP.



2. Use B to fix the Selector.



3. Use C to fix the Grip.



4. Assemble Red Area to Receiver and put the Wire Assembly of Gear Box into groove. (as picture of green frame)



5. Use D to fix the HOP-UP.



6. Use E to fix the Inner Barrel.



7. Only for 7.4V Li-Po battery Two-Piece type. (size:100mm\*20mm\*6mm)



8. If the handguard have heat sink inside, then have to unload it first. The battery is placed in the Lower Handguard as picture, put Wire Assembly in order and assemble Upper and Lower Handguard.



9. Assemble F into Rear Sight Block.



10. Assemble Bolt Carrier Set, Top Cover in order and completed.



**STK-74**

**Battery installation for LCKS-74UN**



Assembly step is same as 1-7 of A area.



8. Only for 7.4V Li-Po Battery Stick type (size:75mm\*25mm\*10mm)



9. The battery is placed in the Upper Handguard as picture, and assembly after putting Wire Assembly in order and assemble Upper Handguard.



10. Assemble Bolt Carrier Set, Top Cover in order and completed..




**LCKS-74UN**




Above product details and installation steps, please refer to installation video of LCT official website.

**Battery installation for LCK-12 / LCK-15 / LCK-16**

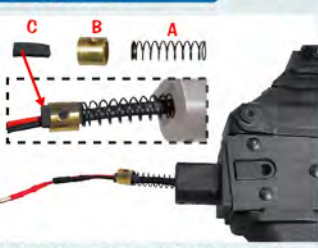

1. Assemble the A and B accordingly, then put C into B. This device is for protection the wire which might be clipped when folds the buttstock.

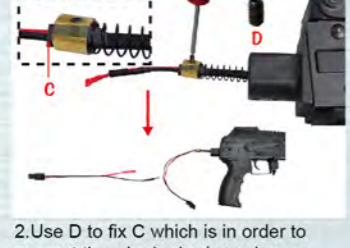

2. Use D to fix C which is in order to prevent the wire be broken when fixes the screw.



3. To cross the wire to E by red arrow direction, then fixed by F. The compatible batteries are 7.4 V two-piece 100mm\*20mm\*6mm and 11.1V stick 95mm\*18mm\*18mm.




4. Ensure the wire be set under the hole, then fixed by G.



5. Before assemble the butt stock, be sure to move the part (as red block) outward to the green position, then recover to red position.



100mm\*20mm\*6mm

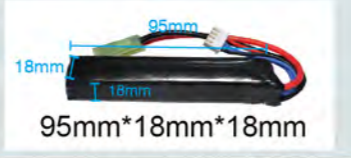

95mm\*18mm\*18mm



**LCK-12**


**Battery installation for LCK-74 / LCK-74M / LCKM / LCKM Economy / LCKM-63 / TX-63 / RPK**



1. To take apart the butt plate following the red arrow direction.



2. The compatible batteries are 7.4 V two-piece 100mm\*20mm\*6mm and 11.1V stick 95mm\*18mm\*18mm.

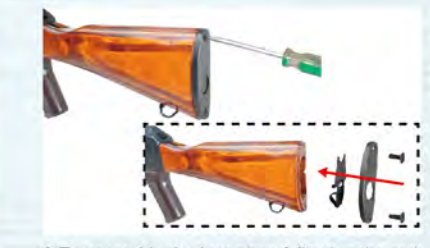

3. To assemble the butt plate following the red arrow direction.

**Battery installation for LTS-Keymod13.5 / LTS-Keymod9.5**



95mm\*18mm\*18mm



75mm\*25mm\*10mm



100mm\*20mm\*6mm

Please choose the suitable batteries based on the battery room space in order to prevent any hurts.

**Battery installation for TX-MIG / TX-5**



The compatible batteries are 7.4 V two-piece 100mm\*20mm\*6mm.

**Battery installation for TX-M / TK-104**



The compatible batteries are 7.4 V two-piece 100mm\*20mm\*6mm.



**CAUTION & WARNING**

The AEGs are only for 18 years old and above. All products are only for airsoft and collection purpose. DO NOT MODIFY. このエアガンは、使用者・管理者対象年齢18歳以上の競技銃です。 依照法規使用本產品須年滿十八歲，所有產品皆符合法令規定，禁止危險改造。