LCTairsoft
利成科技 ®

WE SELL NOT ONLY GUNS, BUT ALSO DREAMS

LCTairsoft LCTairsoft lctairsoft_offical lctairsoft Kevin Lctairsoft

www.LCTairsoft.com

LI CHENG Technique Bussiness Co.
No. 89, Ln. 535, Ganzhu Rd., Hemei Township,
Changhua County 508, Taiwan(R.O.C)
+886 4 7355551 +886 4 7364887
service@lctairsoft.com

LK-V202101

MADE IN TAIWAN

LK SERIES

AEG EBB CH EN

GENERAL OPERATION MANUAL

EBB ELECTRIC BLOWBACK

LK-53A2

LK-53A3

LK-33A2

LK-33A3

WARNING Safety instruction

PLAY SAFELY & SMARTLY

勿將槍口朝向人或動物

Never let the muzzle toward people or animals as target.

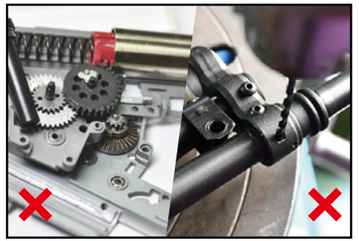

請勿任意拆解內部零件，或惡意改裝

Do not disassemble internal parts at will, or modify maliciously.

射擊時請全程配戴護目鏡/安全配備，並隨時留意周邊安全

Be sure to wear safety glasses / goggles when shooting, or other proective gears in necessary. Always pay attention to the security around you.

請妥善保管，切勿供未成年人任意取用操作

Please keep it in a safe place, and do not allow it to be used by any children under legal age.

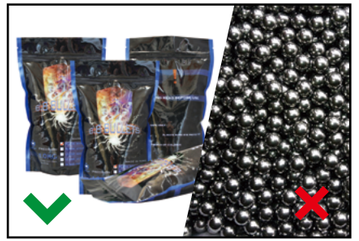

敬請使用原廠規格6mm塑料BB彈。嚴禁使用金屬或其他非原廠規格BB彈，以免觸法。

Please use LCT specification 6mm plastic BB bullet.
To avoid breaking the law, the use of metal or other non-original specifications BB bullets is strictly prohibited.

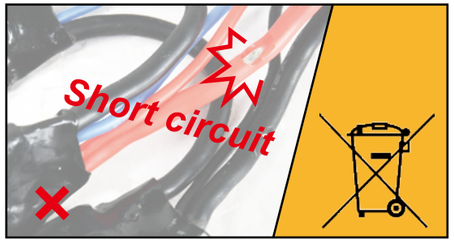

勿使用破損或不當尺寸電池，將導致短路故障。使用完畢請移除電池，嚴禁任意丟棄廢電池

Do not use damaged or improperly sized batteries, which will cause a short circuit breakdown. Please remove the battery after being used.
It is strictly forbidden to discard waste batteries improperly.

Battery Installation 操作說明

移除護木固定插銷

Remove the locking-pin in front of the handguard.

適用2/3片式鋰電池，請圖示配置

Compatible with 2 or 3-piece Li-po battery. Installation as shown.

裝回護木時請留意電線位置，插回插銷

Pay attention to the position of wires when replacing the handguard to avoid damage. Insert locking pin again.

33 Series

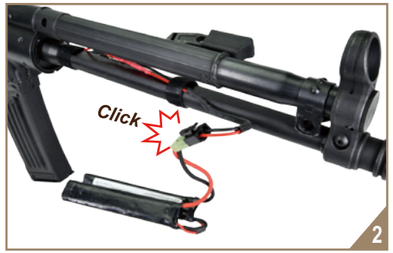

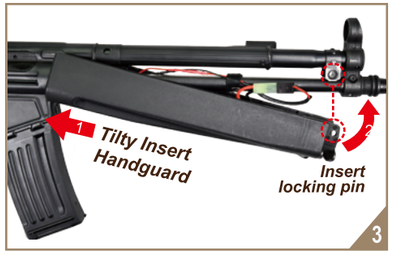

53 Series

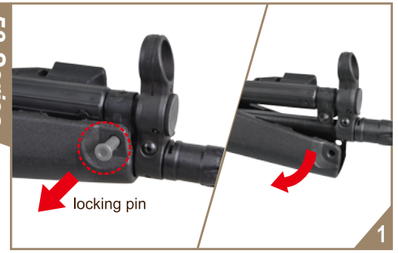

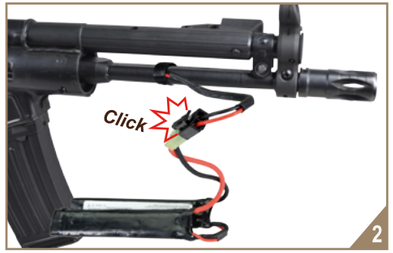

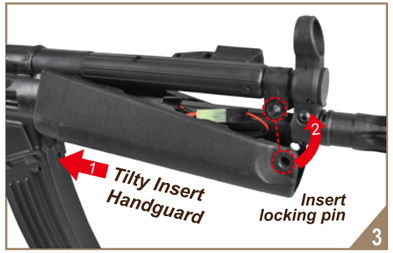

移除護木固定插銷

Remove the locking-pin in front of the handguard.

連接電池，請勿強行安裝非建議尺寸電池

Connect the battery, Do not force to install non-recommended size batteries

裝回護木時請留意電線位置，插回插銷

Pay attention to the position of wires when replacing the handguard to avoid damage. Insert locking pin again.

LK Series

往下推開槍托底板

Push downward to remove the butt plate.

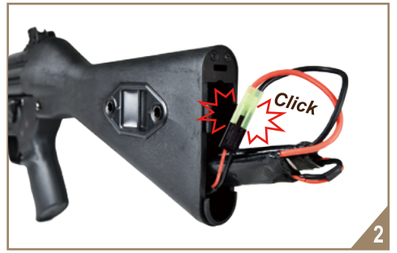

連接電池，注意接頭方向 ，將電池收納於槍托內

Pay attention to the direction of the socket when connecting the battery.

反向裝回槍托底板

Replacing the butt plate by opposite direction.

注意! 請使用適當尺寸電池，防止產品損壞

Please choose the compatible batteries to prevent damages.

OPERATION *Safety / Fire selector*

LK Series

保險 S=SAFE

單發 E=Single fire

連發 F=Burst

三段火控選擇鈕位於槍身左側。非射擊時，請隨時將火控置於保險位置。

The three position selector lever is situated on the left side of the grip assembly. Beside shooting, please keep selector on safe position in any time.

OPERATION *Retractable Stock*

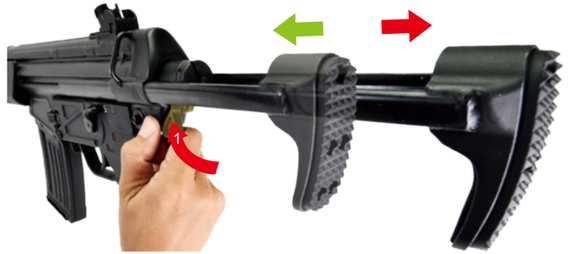

依箭頭(1)方向轉動後托開關鈕，可展開或縮回槍托

Pulling the Stock adjustment lever, make the stock fully expanded or collapsed.

槍托鎖定於最短位置時，不可有空隙

It should be without any gap while the stock been fully collapsed.

LCTairsoft

Windage Adjustment

LK / LC Series

鬆開照門座固定螺絲 Loosen clamping screw on top of sight base.

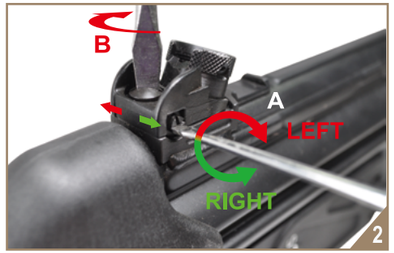

(1)左右調整風偏修正螺絲 ，調整完畢鎖緊覘孔座固定螺絲(2)

Turn adjusting screw(A) on the right side according to requirement. The clamping screw(B) should be tightened after adjustment.

Apertures Selection

手動旋轉照門，依彈著選擇覘孔高低位置(順時針降低，逆時針調高)

Rotate sight cylinder in desired direction by hand; (to lower point of impact turn clockwise, to raise point of impact turn counter-clockwise.)

Sight pictures

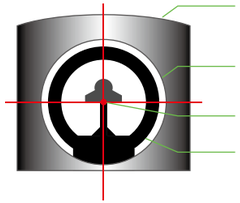

Rear sight 後照門

Aperture 覘孔

Point of impact 彈著

Front sight 前準星

Correct Point of Aim

正確瞄準圖

Incorrect Point

LEFT 偏左

Incorrect Point

RIGHT 偏右

Incorrect Point

HIGH 偏上

Incorrect Point

LOW 偏下

向後拉動槍機拉柄，固定於缺口中

Pull back the cocking lever and stabilize it at the notch.

調整HOP UP時嚴禁觸動拉柄

Do not touch the cocking lever while adjusting HOP UP.

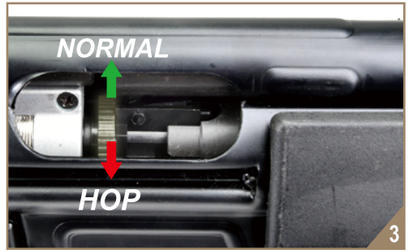

調整HOP UP，使彈道保持最佳位置(如下圖)

Dial HOP UP to HOP or NORMAL direction. Keep the best trajectory. (Fig. 1)

調整HOP UP時慎防夾傷手指

Be careful not to pinch your fingers while adjusting HOP UP.

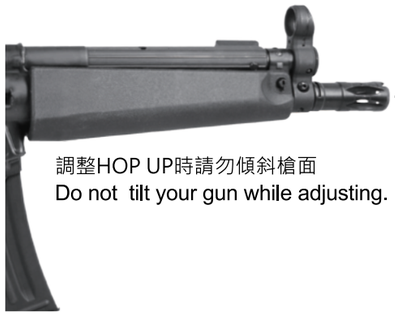

調整HOP UP時請勿傾斜槍面

Do not tilt your gun while adjusting.

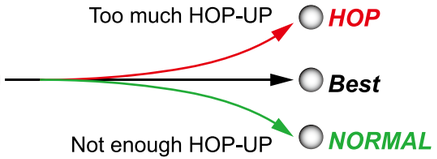

(Fig. 1)

卸除後托插銷及槍托總成

Remove the locking pin and detach the stock assembly.

使用一字起子卸除尾頂桿(如圖示操作)

Remove the spring guide by a flathead screwdriver. (Operate as graphic)

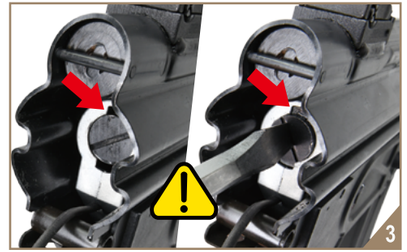

尾頂桿凸耳對齊齒輪箱缺口，注意零件彈出

Align lugs of spring guide and the slot of gearbox. Be careful of parts to pop up.

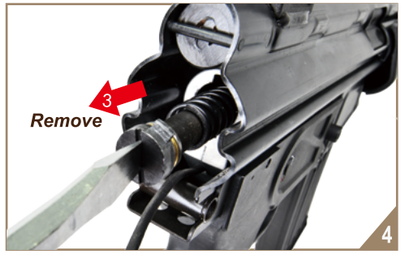

抽出尾頂桿及彈簧

Take out the spring guide and spring.

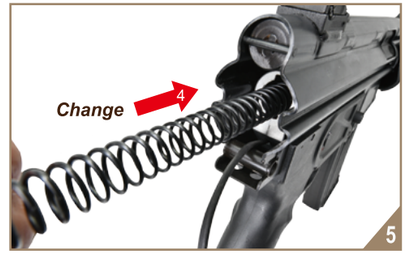

更換彈簧，以相反步驟裝回尾頂桿及槍托

Change the spring, reinstall the spring guide and stock by reverse steps.

QM Spring series 快拆彈簧系列

PK401 QM135 (m/s)	PK400 QM120 (m/s)
PK399 QM110 (m/s)	PK398 QM100 (m/s)
PK397 QM 90 (m/s)	

⚠ 警告 WARNING
Do not violate local velocity regulations.

OPERATION *Optional Accessory*

33 Series LK010

對齊護木腳架結合座卡槽，滑入即可固定
Align the bipod mounting gap in fornt of handguard. Slide and catch a bipod.

往下按壓腳架按鈕，可收起/展開腳架
Press the button downward to fold / unfold a bipod.

按壓護木下方彈片，即可移除腳架
Press the leaf spring attached to the bottom of handguard to detach a bipod.

33 Series LC006

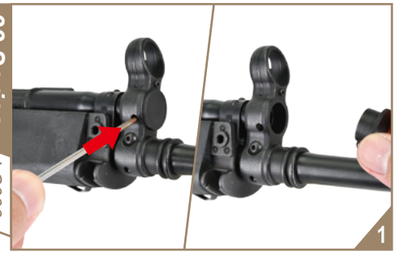

移除飾蓋
Remove the cover.

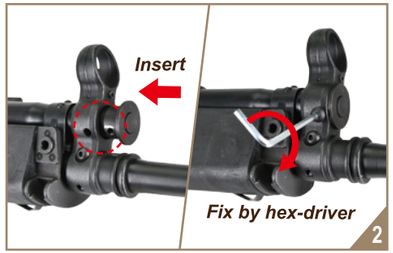

安裝刺刀座
Insert and fix the bayonet adapter.

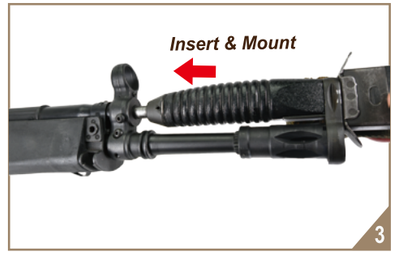

安裝範例(不含展示模型刺刀)
Mount a bayonet.
(Display model excluded)

PRECISION / BIO TRACER

2800R Bottle Series

Extreme Precision Tracer BB
Ø 5.95±0.015mm
Color: Green / Red

C28	0.20G	GRN.
C29	0.25G	GRN.
C30	0.20G	RED
C31	0.25G	RED

Biodegradable Tracer BB
Ø 5.95±0.015mm
Color: Green

C22	0.20G	GRN.
C23	0.23G	GRN.
C24	0.25G	GRN.
C25	0.28G	GRN.
C26	0.30G	GRN.
C27	0.32G	GRN.

PRECISION / BIO

1KG Pack Series

Extreme Precision BB
Ø 5.95±0.015mm
Color: White

C11	0.20G	5000 R
C12	0.23G	4350 R
C13	0.25G	4000 R
C14	0.28G	3575 R
C15	0.30G	3335 R

Biodegradable BB
Ø 5.95±0.015mm
Color: White

C06	0.20G	5000 R
C07	0.23G	4350 R
C08	0.25G	4000 R
C09	0.28G	3575 R
C10	0.30G	3335 R

EBB ROF. limitation< 700 RPM. To avoid system malfunction.
循環射速需低於700發/分，避免系統故障

33 Series LC034

放妥軌道，兩側固定勾對齊槍身位置

Align the rail mounting hooks in both sides between the receiver.

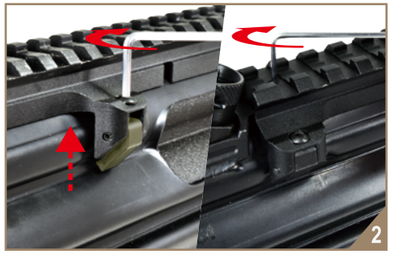

鎖緊螺絲，軌道不可搖晃

Fasten all screws to fix the rail firmly.

安裝範例(不含展示瞄具)

Mount a scope.(Display model excluded)

LK Series

EBB系列裝飾槍機可動

EBB=Electric Blow Back, with an action dummy bolt carrier.

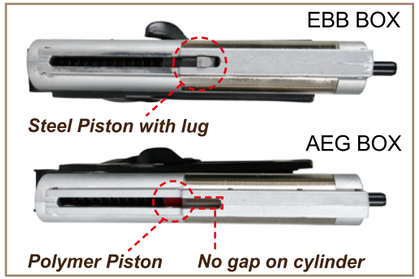

LK Series AEG齒輪箱可更換為EBB形式

LK Series AEG gear box could be changed to an EBB type.

CAUTION

EBB運作時嚴禁碰觸拋殼口，慎防夾傷

Do not touch the ejection port during EBB operation, Be careful not to get caught.

敬請使用LCT高精度/生物分解BB彈 Please use LCT high precision/ BIO BBs.

Mid-Cap.

LOAD BBs

無聲彈匣使用填彈器(另購)裝填

Using a BB loader(excluded) to fill in the mid-cap magazine.

Hi-Cap.

開啟彈匣上方填彈口填入BB彈，填滿後請確實關妥蓋子

Open the magazine top lid and fill in BBs. Make sure the cover firmly closed.

上緊底部上彈發條(單向)，直到發出喀喀聲

Wind the spring ratchet (One way) at the buttom of magazine until hearing crackling sound.

LK Series

Loading

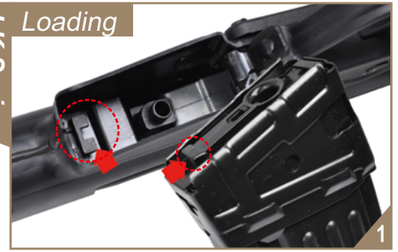

以傾斜方式將彈匣前方插入彈匣勾(紅色箭頭位置)

Tilt and insert the hook into the magazine socket. (show as red arrows)

再將彈匣後方推入彈匣井(箭頭方向)，直到卸彈鈕固定住彈匣

Insert it into magazine magwell (as red arrow) until until the magazine set firmly.

Unloading

握穩彈匣，以拇指前推(A)/按壓(B)卸彈鈕即可卸下

Hold the magazine, push the magazine release lever(A) or press the button(B) for unloading.

For LK Series

LK012 Mid-Cap.(70R)
LK006 Mid-Cap.(130R)
LK007 Hi-Cap.(600R)

LK011 Mid-Cap.(60R)
LK004 Mid-Cap.(100R)
LK005 Hi-Cap.(300R)

LK009 LK-33 Retractable Stock

LK008 LK-33 Plastic Fixed Stock Set(BK)

For LK-33 Series

LK001 LK33 Slimline Handguard

LK002 LK33 Wide Handguard

LK003 LK33 RS Handguard

For LK / LC-3 Series PARTS

LC005 LC-3 Flash Hider

LC007 LC-3 Rotating Drum Rear Sight

LC020 LC-3 Locking Pin (6.9mm*L38.5mm)

LC021 Locking Pin (5.9mm*L31.5mm)

LC023 Cocking Lever(BK)
LC024 Cocking Lever(GR)

LC031 LC-3 Anti-Heat Selector Plate

LC026 LC-3 Buttstock Switch Assembly

LC040 LC-3 Handguard Switch Assembly

LC056 Buttstock Switch Assembly

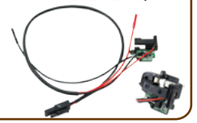

LC057 Handguard Switch Assembly

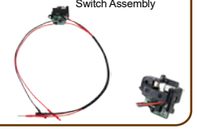

LC047
LC-3 Quick Spring Change Gearbox and Handguard Switch Assembly for EBB (With 6pcs of 6mm Bearing)

LC046
LC-3 Quick Spring Change Gearbox and Buttstock Switch Assembly for EBB (With 6pcs of 6mm Bearing)

For LK-33 / LC-3 Series

LC027 LC-3 Bipod

LK010 LK-33 Bipod

LC034 Low-profile scope mount

Other parts

LC006 Bayonet Adaptor

F Front wire(Handguard)
R Rear wire(Stock)

LK-53 Series AEG / EBB Exploded View

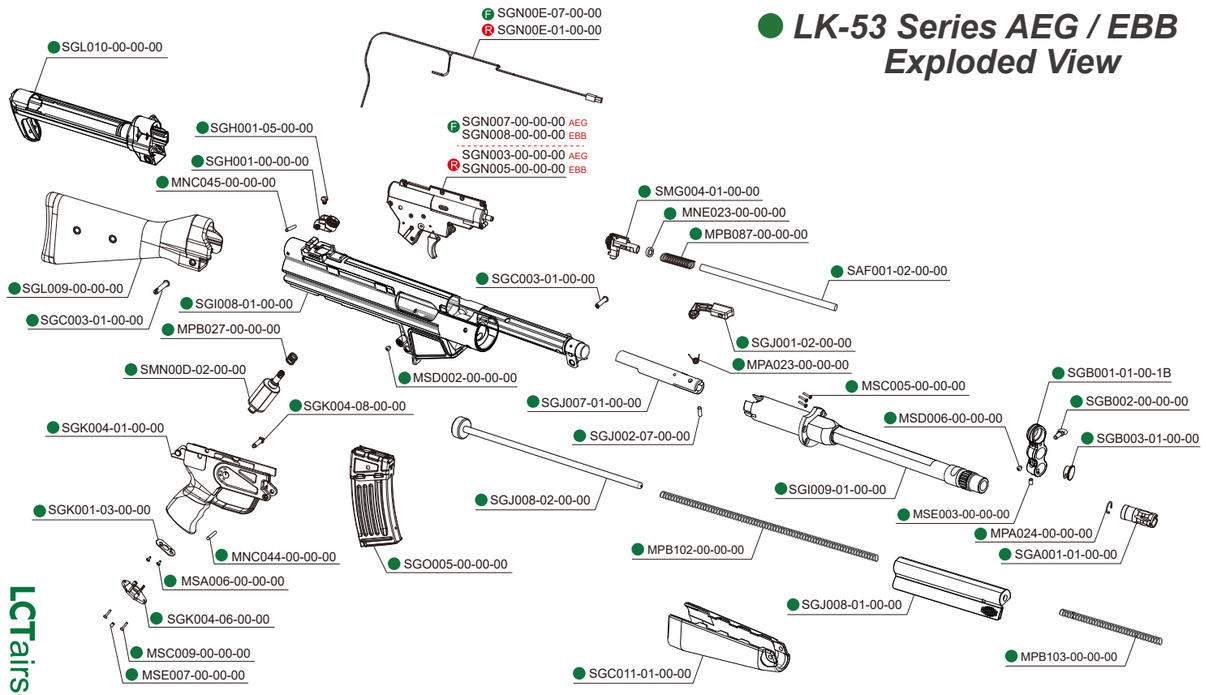
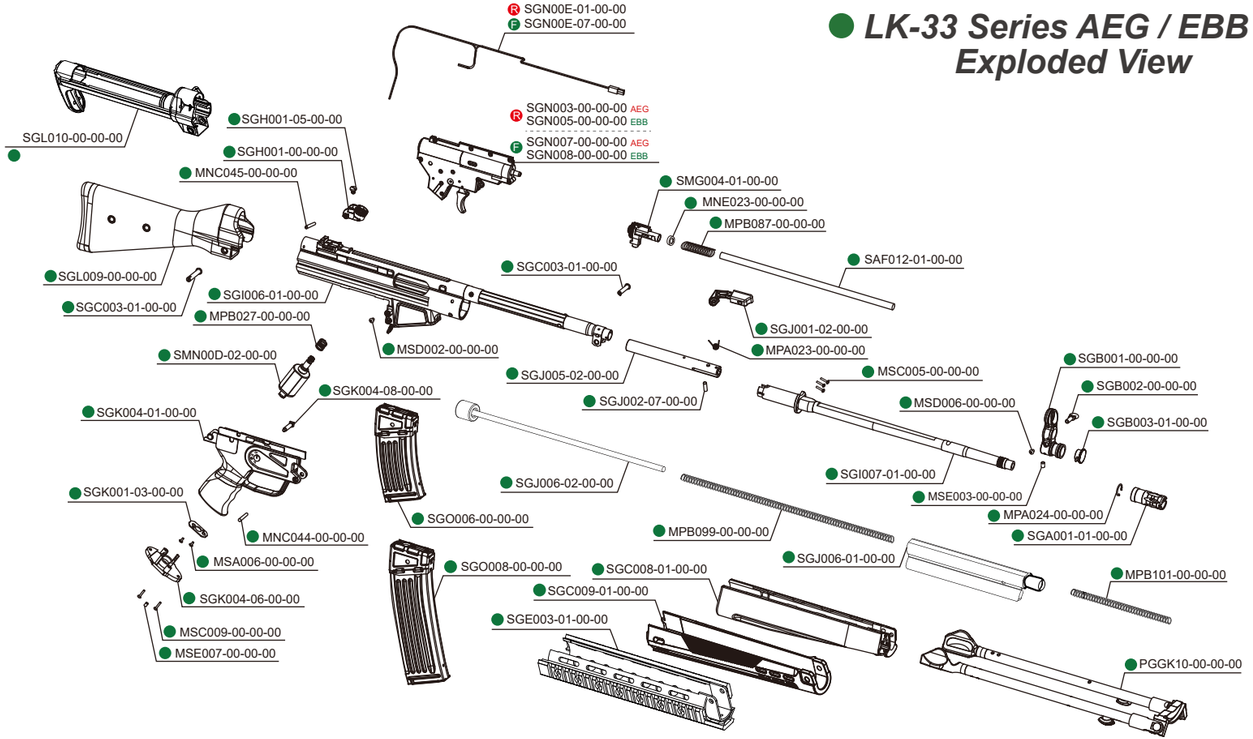
LK-33 Series AEG / EBB Exploded View